



Woosh PC Card Quick Reference Guide


Your PC Card connection kit contains:




INSTALLATION CD



SWEET SPOT STICKER

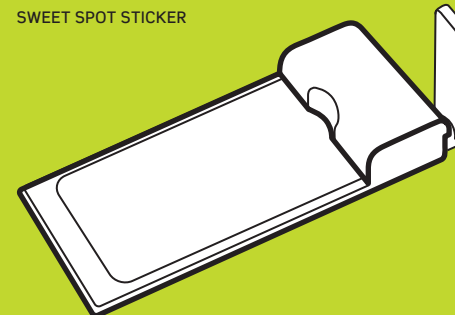

PC CARD (WITH MINI ANTENNA)

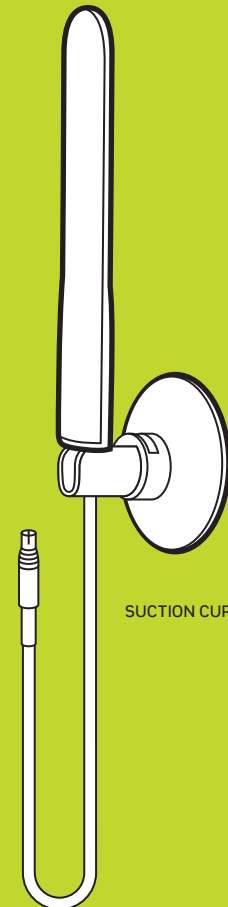

ANTENNA & LONG CABLE

NEED HELP? If you want to speak to our friendly Contact Centre, simply call 0800 4 WOOSH (0800 4 96674) for FREE customer service and technical support. We also offer free in-home support as standard. That means if you have any problems we can't sort out over the phone, you can arrange for our Support Crew to come around and sort it all out for you.

PRINTED OCTOBER 2007 (3172 WW)

ITEMS SHOWN ARE NOT TO SCALE

Follow the simple steps below to connect to Woosh.

01 Remove mini antenna and attach the long antenna to the PC Card (SEE DIAGRAM).

- (a) Use the 'Sweet Spot' sticker as a base to apply the suction cup that will hold your antenna.
- (b) Place the 'Sweet Spot' sticker on the back of your notebook.
- (c) If you don't want to stick the antenna to your notebook, you can position it on a flat surface nearby, or stick it to a nearby window to achieve max signal strength.

02 Insert the CD and run the install wizard before inserting the PC Card.

- (a) Follow instructions on screen. There will be instances where you will be offered options, please select;
 - > 'Setting up the internet only' > 'PC Card Connection Kit'.

For Mac users, install from the CD directory;
dir/mac_soft/WirelessDialler.pkg followed by installing
dir/update/IPWDriverUpgrade.pkg

- (b) Accept the licence agreement and wait for files to transfer.

03 When instructed, insert the PC Card into the PCMCIA slot.

- (a) Follow instructions clicking 'Next' to detect the PC Card and register online.

04 Connect to Woosh, and complete rest of the registration process. When prompted, type your full username (wooshuser@woosh.co.nz) and your password.

DIAGRAM SHOWING HOW THE ANTENNA ATTACHES TO THE PC CARD

